Measure your caravan window


For SJRV rounded-corner and square-corner windows. Measure the complete black outer frame in millimetres (mm), then estimate the website size below.

Include the complete black frame in both measurements.

01 / WIDTH

Measure left to right

Place the tape horizontally from the outer left edge of the black frame to its outer right edge. Keep the tape straight and read at the right outer edge.

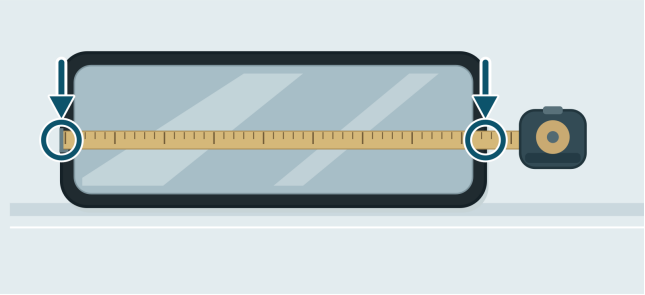


Read at the outer right edge.

Outer-frame width: _____ mm

02 / HEIGHT

Measure top to bottom

Place the tape vertically from the outer top edge of the black frame to its outer bottom edge. Keep the tape straight and read at the bottom outer edge.

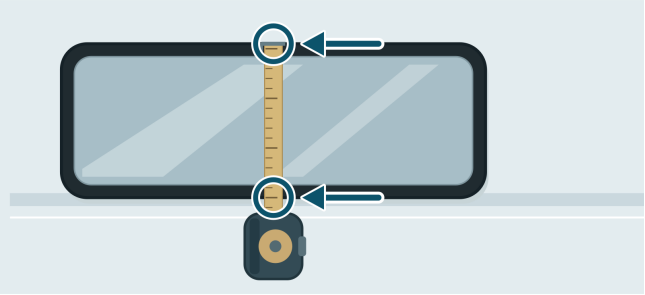

Read at the outer bottom edge.

Outer-frame height: _____ mm

03 / WEBSITE SIZE

Subtract 30 mm from each measurement

Approx. website width = outer-frame width - 30 mm

Approx. website height = outer-frame height - 30 mm

Deduct a total of 30 mm from each overall dimension.

EXAMPLE Outer frame: width 930 mm and height 530 mm.
Approx. website size: Width 900 mm | Height 500 mm.

Choose your window size

Use the calculated width and height to select the matching size on the product page.

Before you order

The 30 mm deduction is an approximate sizing guide for both SJRV window styles. Confirm the selected model's required wall opening and fitment requirements before ordering.

Wall cut-out

Confirm the required wall opening for the selected model and size.

Finished wall thickness

Check the complete wall thickness, including the interior finish.

Corner profile

Check the rounded or square profile and required opening shape.

Operating space

Allow space for the opening pane outside and the blind/flyscreen frame inside.

OPTIONAL HELP

Not sure which size to choose?

If you are unsure which size to choose, or your result does not match a listed size, email us. Include your original outer-frame width and height, calculated website size, and window style (rounded or square).

Email: sales@sjrv.com.au